

SafeTaxi Europe Coverage List – Cycle 24S6

Albania

Identifier	Aerodrome Name	City	Country
LAKU	Kukes Airport	Kukes	Albania
LATI	Tirana International Airport	Tirana	Albania

Armenia

Identifier	Aerodrome Name	City	Country
UDSG	Shirak International Airport	Gyumri	Armenia
UDYE	Erebuni Airport	Yerevan	Armenia
UDYZ	Zvartnots International Airport	Yerevan	Armenia

Armenia-Georgia

Identifier	Aerodrome Name	City	Country
UGAM	Ambrolauri Airport	Ambrolauri	Armenia-Georgia
UGGT	Telavi Airport	Telavi	Armenia-Georgia
UGKO	Kopitnari International Airport	Kutaisi	Armenia-Georgia
UGSA	Natakhtari Airport	Natakhtari	Armenia-Georgia
UGSB	Batumi International Airport	Batumi	Armenia-Georgia
UGTB	Tbilisi International Airport	Tbilisi	Armenia-Georgia

Austria

Identifier	Aerodrome Name	City	Country
LOAD	Voltendorf Airport	Voltendorf	Austria
LOAN	Wr. Neustadt Airport	Wr. Neustadt	Austria
LOAR	Altlichtenwarth Airport	Altlichtenwarth	Austria
LOAV	Voslau Airport	Voslau	Austria
LOGP	Pinkafeld Airport	Pinkafeld	Austria
LOLW	Wels Airport	Wels	Austria
LOWG	Graz Airport	Graz	Austria
LOWI	Innsbruck Airport	Innsbruck	Austria
LOWK	Klagenfurt Airport	Klagenfurt	Austria
LOWL	Linz Airport	Linz	Austria
LOWS	Salzburg Airport	Salzburg	Austria
LOWW	Wien-Schwechat Airport	Wien-Schwechat	Austria
LOWZ	Zell Am See Airport	Zell Am See	Austria
LOXT	Brumowski Air Base	Tulln	Austria
LOXZ	Zeltweg Airport	Österreich	Austria

Azerbaijan

Identifier	Aerodrome Name	City	Country
UBBB	Baku - Heydar Aliyev Airport	Baku	Azerbaijan
UBBF	Fuzuli Airport	Fuzuli	Azerbaijan
UBBG	Ganja Airport	Ganja	Azerbaijan
UBBL	Lenkoran Airport	Lenkoran	Azerbaijan
UBBN	Nakhchivan Airport	Nakhchivan	Azerbaijan
UBBQ	Gabala Airport	Gabala	Azerbaijan
UBBY	Zagatala Airport	Zagatala	Azerbaijan
UBBZ	Zangilan Airport	Zangilan	Azerbaijan
UBEE	Yevlakh Airport	Yevlakh	Azerbaijan

***Denotes new airport coverage for the current cycle**

Belgium

Identifier	Aerodrome Name	City	Country
EBAW	Antwerpen - Deurne Airport	Antwerpen / Deurne	Belgium
EBBE	Beauvechain Airport	Beauvechain	Belgium
EBBL	Kleine-Brogel Air Base	Kleine-Brogel	Belgium
EBBR	Brussels - Brussels-National Airport	Brussels	Belgium
EBCI	Charleroi - Brussels South Airport	Charleroi	Belgium
EBCV	Chièvres Air Base	Chièvres	Belgium
EBFN	Koksijde Air Base	Koksijde	Belgium
EBFS	Florennes Air Base	Florennes	Belgium
EBKH	Balen-Keiheuval Airport	Balen	Belgium
EBKT	Kortrijk - Wevelgem Airport	Kortrijk / Wevelgem	Belgium
EBLG	Liège Airport	Liège	Belgium
EBOS	Oostende-Brugge Airport	Oostende / Brugge	Belgium

Bosnia-Herzegovina

Identifier	Aerodrome Name	City	Country
LQBK	Banja Luka Airport	Banja Luka	Bosnia-Herzegovina
LQMO	Mostar Airport	Mostar	Bosnia-Herzegovina
LQSA	Sarajevo Airport	Sarajevo	Bosnia-Herzegovina
LQTZ	Tuzla Airport	Tuzla	Bosnia-Herzegovina

Bulgaria

Identifier	Aerodrome Name	City	Country
LBBG	Burgas Airport	Burgas	Bulgaria
LBGO	Gorna Oryahovitsa Airport	Gorna Oryahovitsa	Bulgaria
LBPD	Plovdiv Airport	Plovdiv	Bulgaria
LBSF	Sofia Airport	Sofia	Bulgaria
LBWN	Varna Airport	Varna	Bulgaria

Croatia

Identifier	Aerodrome Name	City	Country
LDDU	Dubrovnik - Cilipi Airport	Dubrovnik	Croatia
LDLO	Lošinj Airport	Lošinj	Croatia
LDOS	Osijek - Klisa Airport	Osijek	Croatia
LDPL	Pula Airport	Pula	Croatia
LDRI	Rijeka - Krk I. Airport	Rijeka	Croatia
LDSB	Brač I. Airport	Brač	Croatia
LDSP	Split - Kastela Airport	Split	Croatia
LDZA	Franjo Tudman Airport	Zagreb	Croatia
LDZD	Zadar - Zemunik Airport	Zadar	Croatia

Cyprus

Identifier	Aerodrome Name	City	Country
LCLK	Larnaka International Airport	Larnaka	Cyprus
LCPH	Pafos International Airport	Pafos	Cyprus

Czech Republic

Identifier	Aerodrome Name	City	Country
LKBA	Břeclav Airport	Břeclav	Czech Republic
LKBO	Bohuňovice Airport	Bohuňovice	Czech Republic
LKBU	Bubovice Airport	Bubovice	Czech Republic
LKCE	Česká Lípa Airport	Česká Lípa	Czech Republic
LKCS	České Budějovice Airport	České Budějovice	Czech Republic
LKCV	Čáslav Airport	Čáslav	Czech Republic
LKDK	Dvůr Králové Airport	Dvůr Králové	Czech Republic
LKER	Erpužice Airport	Erpužice	Czech Republic

**Denotes new airport coverage for the current cycle*

LKFR	Fridlant Airport	Fridlant	Czech Republic
LKHB	Havlíčkův Brod Airport	Havlíčkův Brod	Czech Republic
LKHD	Hodkovice Airport	Hodkovice	Czech Republic
LKHK	Hradec Králové Airport	Hradec Králové	Czech Republic
LKHN	Hranice Airport	Hranice	Czech Republic
LKHS	Hosín Airport	Hosín	Czech Republic
LKJA	Jaroměř Airport	Jaroměř	Czech Republic
LKJC	Jičín Airport	Jičín	Czech Republic
LKJI	Jihlava Airport	Jihlava	Czech Republic
LKKA	Křižanov Airport	Křižanov	Czech Republic
LKKB	Kbely Airport	Kbely	Czech Republic
LKKL	Kladno Airport	Kladno	Czech Republic
LKKM	Kroměříž Airport	Kroměříž	Czech Republic
LKKO	Kolín Airport	Kolín	Czech Republic
LKKR	Krnov Airport	Krnov	Czech Republic
LKKT	Klatovy Airport	Klatovy	Czech Republic
LKKU	Kunovice Airport	Kunovice	Czech Republic
LKKV	Karlovy Vary Airport	Karlovy Vary	Czech Republic
LKKY	Kyjov Airport	Kyjov	Czech Republic
LKLU	Luhacovice Airport	Luhacovice	Czech Republic
LKMH	Mnichovo Hradiště Airport	Mnichovo Hradiště	Czech Republic
LKMI	Mikulovice Airport	Mikulovice	Czech Republic
LKMO	Most Airport	Most	Czech Republic
LKMT	Ostrava/Mosnov Airport	Ostrava/Mosnov	Czech Republic
LKNA	Náměšť Airport	Náměšť	Czech Republic
LKNM	Nové Město Airport	Nové Město	Czech Republic
LKOL	Olomouc Airport	Olomouc	Czech Republic
LKPA	Polička Airport	Polička	Czech Republic
LKPD	Pardubice Airport	Pardubice	Czech Republic
LKPI	Přibyslav Airport	Přibyslav	Czech Republic
LKPJ	Prostějov Airport	Prostějov	Czech Republic
LKPL	Letkov Airport	Letkov	Czech Republic
LKPN	Podhořany Airport	Podhořany	Czech Republic
LKPO	Přerov Airport	Přerov	Czech Republic
LKPR	Praha/Ruzyně Airport	Praha/Ruzyně	Czech Republic
LKPS	Plasy Airport	Plasy	Czech Republic
LKRA	Raná u Loun Airport	Raná u Loun	Czech Republic
LKRO	Roudnice Airport	Roudnice	Czech Republic
LKSA	Staňkov Airport	Staňkov	Czech Republic
LKSB	Štichovice Airport	Štichovice	Czech Republic
LKSK	Skuteč Airport	Skuteč	Czech Republic
LKSR	Strunkovice Airport	Strunkovice	Czech Republic
LKST	Strakonice Airport	Strakonice	Czech Republic
LKTA	Tábor Airport	Tábor	Czech Republic
LKTB	Brno - Tuřany Airport	Brno / Tuřany	Czech Republic
LKTC	Točná Airport	Točná	Czech Republic
LKUL	Ústí nad Labem Airport	Ústí nad Labem	Czech Republic
LKUO	Ústí nad Orlicí Airport	Ústí nad Orlicí	Czech Republic
LKVO	Vodochody Airport	Vodochody	Czech Republic
LKVP	Velké Poříčí Airport	Velké Poříčí	Czech Republic
LKVR	Vrchlabí Airport	Vrchlabí	Czech Republic
LKVY	Vyškov Airport	Vyškov	Czech Republic
LKZA	Zábřeh Airport	Zábřeh	Czech Republic
LKZB	Zbraslavice Airport	Zbraslavice	Czech Republic
LKZM	Žamberk Airport	Žamberk	Czech Republic
LKZN	Znojmo Airport	Znojmo	Czech Republic

**Denotes new airport coverage for the current cycle*

Denmark

Identifier	Aerodrome Name	City	Country
EKAE	Aero Airport	Marstal	Denmark
EKAH	Aarhus Airport	Aarhus	Denmark
EKBI	Billund Airport	Billund	Denmark
EKCH	Kobenhaven - Kastrup Airport	Kobenhaven / Kastrup	Denmark
EKEB	Esbjerg Airport	Esbjerg	Denmark
EKHG	Herning Airport	Herning	Denmark
EKKA	Midtjyllands Airport	Karup	Denmark
EKKL	Kalundborg Airport	Eskebjerg	Denmark
EKLS	Laeso Airport	Laeso	Denmark
EKLV	Lemvig Airport	Lemvig	Denmark
EKMB	Lolland Falster Airport	Rodby	Denmark
EKNM	Morso Airport	Erslev	Denmark
EKOD	Hans Christian Andersen Airport	Odense	Denmark
EKPB	Krusa Padborg Airport	Padborg	Denmark
EKRD	Randers Airport	Randers	Denmark
EKRK	Kobenhavn - Roskilde Airport	Kobenhavn / Roskilde	Denmark
EKRN	Bornholm - Rønne Airport	Bornholm / Rønne	Denmark
EKRS	Ringsted Airport	Ringsted	Denmark
EKSB	Sønderborg Airport	Sønderborg	Denmark
EKSN	Sindal Airport	Sindal	Denmark
EKSP	Vojens - Skrydstrup Airport	Vojens / Skrydstrup	Denmark
EKST	Tasinge/Elvira Madigan Airport	Svendborg	Denmark
EKSV	Skive Airport	Skive	Denmark
EKTS	Thisted Airport	Thisted	Denmark
EKVB	Viborg Airport	Viborg	Denmark
EKVD	Kolding - Vamdrup Airport	Kolding / Vamdrup	Denmark
EKVG	Vágar Airport	Vágar	Faroe Islands
EKVJ	Stauning Airport	Stauning	Denmark
EKYT	Aalborg Airport	Aalborg	Denmark

Estonia

Identifier	Aerodrome Name	City	Country
EEEE	Ämari Airport	Ämari	Estonia
EEKA	Kärdla Airport	Kärdla	Estonia
EEKE	Kuressaare Airport	Kuressaare	Estonia
EEKU	Kihnu Airport	Kihnu	Estonia
EEPU	Pärnu Airport	Pärnu	Estonia
EERU	Ruhnu Airport	Ruhnu	Estonia
EETN	Lennart Meri Tallinn Airport	Lennart Meri Tallinn	Estonia
EETU	Tartu Airport	Tartu	Estonia

Finland

Identifier	Aerodrome Name	City	Country
EFET	Enontekiö Airport	Enontekiö	Finland
EFHA	Halli Airport	Halli	Finland
EFHK	Helsinki-Vantaa Airport	Helsinki-Vantaa	Finland
EFIV	Ivalo Airport	Ivalo	Finland
EFJO	Joensuu Airport	Joensuu	Finland
EFJY	Jyväskylä Airport	Jyväskylä	Finland
EFKE	Kemi-Tornio Airport	Kemi-Tornio	Finland
EFKI	Kajaani Airport	Kajaani	Finland
EFKK	Kokkola-Pietarsaari Airport	Kokkola	Finland
EFKS	Kuusamo Airport	Kuusamo	Finland
EFKT	Kittilä Airport	Kittilä	Finland
EFKU	Kuopio Airport	Kuopio	Finland
EFLP	Lappeenranta Airport	Lappeenranta	Finland
EFMA	Mariehamn Airport	Mariehamn	Finland

**Denotes new airport coverage for the current cycle*

EFMI	Mikkeli Airport	Mikkeli	Finland
EFOU	Oulu Airport	Oulu	Finland
EFPO	Pori Airport	Pori	Finland
EFRO	Rovaniemi Airport	Rovaniemi	Finland
EFSA	Savonlinna Airport	Savonlinna	Finland
EFSI	Seinäjoki Airport	Seinäjoki	Finland
EFTP	Tampere-Pirkkala Airport	Tampere-Pirkkala	Finland
EFTU	Turku Airport	Turku	Finland
EFUT	Utti Airport	Utti	Finland
EFVA	Vaasa Airport	Vaasa	Finland

France

Identifrier	Aerodrome Name	City	Country
LFAC	Calais - Marck Airport	Marck	France
LFAL	La Fleche Thoree Les Pins Airport	La Fleche	France
LFAQ	Albert - Picardie Airport	Albert / Bray	France
LFAT	Le Touquet Elizabeth II Airport	Le Touquet	France
LFAY	Valenciennes - Denain Airport	Valenciennes/Denain	France
LFAY	Amiens - Glisy Airport	Amiens / Glisy	France
LFBA	Agen - La Garenne Airport	Agen / La Garenne	France
LFBC	Cazaux Air Base	Cazaux	France
LFBD	Bordeaux - Mérignac Airport	Bordeaux / Mérignac	France
LFBE	Bergerac Dordogne Périgord Airport	Bergerac / Roumanière	France
LFBF	Toulouse - Francazal Air Base	Toulouse / Francazal	France
LFBG	Cognac - Châteaubernard Air Base	Cognac / Châteaubernard	France
LFBH	La Rochelle - Île de Ré Airport	La Rochelle - Île de Ré	France
LFBI	Poitiers - Biard Airport	Poitiers / Biard	France
LFBK	Montluçon - Guéret Airport	Montluçon / Guéret	France
LFBL	Limoges - Bellegarde Airport	Limoges / Bellegarde	France
LFBM	Mont-de-Marsan Air Base	Mont-de-Marsan	France
LFBN	Marais Poitevin Airport	Niort	France
LFBO	Toulouse - Blagnac Airport	Toulouse / Blagnac	France
LFBP	Pau Pyrénées Airport	Pau / Pyrénées	France
LFBR	Muret - Lherm Airport	Muret / Lherm	France
LFBS	Biscarrosse Parentis Airport	Parentis	France
LFBT	Tarbes - Lourdes - Pyrénées Airport	Tarbes / Lourdes / Pyrénées	France
LFBU	Angoulême - Brie - Champniers Airport	Angoulême / Brie / Champniers	France
LFBX	Périgueux - Bassilac Airport	Périgueux / Bassilac	France
LFBZ	Biarritz Pays Basque Airport	Biarritz	France
LFCB	Bagnères De Luchon Airport	Luchon	France
LFCC	Cahors - Lalbenque Airport	Cahors / Lalbenque	France
LFCI	Albi - Le Séquestre Airport	Albi / Le Séquestre	France
LFCK	Castres - Mazamet Airport	Castres / Mazamet	France
LFCP	Pons Avy Airport	Pons Avy	France
LFCR	Rodez - Marcillac Airport	Rodez / Marcillac	France
LFCT	Thouars Airport	Thouars	France
LFCY	Royan Médis Airport	Royan / Médis	France
LFDG	Gaillac Lisle Sur Tarn Airport	Gaillac	France
LFDH	Auch Gers Airport	Auch Gers	France
LFDJ	Pamiers - Les Pujols Airport	Pamiers / Les Pujols	France
LFDN	Rochefort - Saint-Agnant Airport	Rochefort / Saint-Agnant	France
LFDP	Saint Pierre D'Oleron Airport	Saint Pierre D'Oleron	France
LFEC	Ouessant Airport	Ouessant	France
LFEM	Montargis Vimroy Airport	Montargis	France
LFES	Guiscriff Scaer Airport	Guiscriff / Scaer	France
LFEV	Gray/Saint-Adrien	Gray	France
LFY	Ile D'Yeu Airport	Ile D'Yeu	France
LFFK	Fontenay Le Comte Airport	Fontenay Le Comte	France
LFGA	Colmar - Houssen Airport	Colmar / Houssen	France
LFGG	Belfort Chau Airport	Belfort Chau	France

**Denotes new airport coverage for the current cycle*

LFGJ	Dole - Jura Airport	Dole / Tavaux	France
LFGL	Lons-le-Saunier Courlaoux Airport	Courlaoux	France
LFHG	Saint Chamond L'Horme Airport	Saint Chamond	France
LFHP	Le Puy - Loudes Airport	Le Puy / Loudes	France
LFHV	Villefranche - Tarare Airport	Villefranche / Tarare	France
LFHY	Moulins - Montbeugny Airport	Moulins / Montbeugny	France
LFIK	Riberac Tourette Airport	Riberac	France
LFJL	Metz - Nancy - Lorraine Airport	Metz / Nancy / Lorraine	France
LFJR	Angers - Loire Airport	Angers / Marcé	France
LFJY	Chambley Airport	Chambley	France
LFKB	Bastia - Poretta Airport	Bastia / Poretta	France
LFKC	Calvi - Sainte-Catherine Airport	Calvi / Sainte-Catherine	France
LFKF	Figari - Sud-Corse Airport	Figari / Sud-Corse	France
LFKJ	Ajaccio - Napoléon Bonaparte Airport	Ajaccio / Campo dell'Oro	France
LFKS	Ventiseri - Solenzara Air Base	Solenzara	France
LFLA	Auxerre - Branches Airport	Auxerre / Branches	France
LFLB	Chambéry - Savoie Airport	Chambéry / Aix-Les-Bains	France
LFLC	Clermont - Ferrand - Auvergne Airport	Clermont / Ferrand / Auvergne	France
LFLD	Bourges Airport	Bourges	France
LFLG	Grenoble le Versoud Airport	Grenoble	France
LFLH	Chalon - Champforgeuil Airport	Chalon / Champforgeuil	France
LFLI	Lyon Saint-Exupéry Airport	Lyon / Saint Exupéry	France
LFLN	Saint-Yan Airport	Saint-Yan	France
LFLQ	Roanne - Renaison Airport	Roanne	France
LFLP	Annecy - Haute - Savoie - Mont Blanc Airport	Annecy / Meythet	France
LFLS	Grenoble - Isère Airport	Grenoble / Saint-Geoirs	France
LFLU	Valence - Chabeuil Airport	Valence / Chabeuil	France
LFLV	Vichy - Charmeil Airport	Vichy / Charmeil	France
LFLW	Aurillac Airport	Aurillac	France
LFLX	Châteauroux - Centre "Marcel Dassault" Airport	Châteauroux / Déols	France
LFLY	Lyon - Bron Airport	Lyon / Bron	France
LFMA	Aix-en-Provence Airport	Aix / Les Milles	France
LFMD	Cannes - Mandelieu Airport	Cannes / Mandelieu	France
LFMF	Fayence Airport	Fayence	France
LFMH	Saint-Étienne Loire Airport	Saint-Étienne Loire	France
LFMI	Istres Le Tubé Airport / Istres Air Base	Istres / Le Tubé	France
LFMK	Carcassonne Salvaza Airport	Carcassonne / Salvaza	France
LFML	Marseille Provence Airport	Marseille / Provence	France
LFMN	Nice - Côte d'Azur Airport	Nice / Côte d'Azur	France
LFMP	Perpignan - Rivesaltes Airport	Perpignan / Rivesaltes	France
LFMQ	Le Castellet Airport	Le Castellet	France
LFMT	Montpellier - Méditerranée Airport	Montpellier / Méditerranée	France
LFMU	Béziers Cap d'Adge Airport	Béziers / Vias	France
LFMV	Avignon - Caumont Airport	Avignon / Caumont	France
LFMY	Salon de Provence Airport	Salon de Provence	France
LFNB	Mende - Brenoux Airport	Mende / Brenoux	France
LFNR	Berre La Fare Airport	Berre	France
LFOA	Avord Air Base	Avord	France
LFOB	Beauvais - Tillé Airport	Beauvais / Tillé	France
LFOE	Évreux - Fauville Air Base	Évreux / Fauville	France
LFOH	Le Havre - Octeville Airport	Le Havre / Octeville	France
LFOJ	Orléans - Bricy Airport	Orléans / Bricy	France
LFOK	Vatry Airport	Châlons / Vatry	France
LFOM	Lessay Airport	Lessay	France
LFOP	Rouen Airport	Rouen / Vallée de Seine	France
LFOQ	Blois - Le Breuil Airport	Blois / Le Breuil	France
LFOT	Tours Val de Loire Airport	Tours / Val de Loire	France
LFOU	Cholet - Le Pontreau Airport	Cholet / Le Pontreau	France
LFOV	Laval - Entrammes Airport	Laval / Entrammes	France
LFOY	Le Havre Saint Romain Airport	Le Havre	France
LFOZ	Orléans - Saint-Denis-de-l'Hôtel Airport	Orléans / Saint-Denis-de-l'Hôtel	France

**Denotes new airport coverage for the current cycle*

LFPB	Paris - Le Bourget Airport	Paris / Le Bourget	France
LFPG	Paris - Charles de Gaulle Airport	Paris / Charles de Gaulle	France
LFPM	Melun - Villaroche Airport	Melun / Villaroche	France
LFPN	Toussus-le-Noble Airport	Toussus-le-Noble	France
LFPO	Paris - Orly Airport	Paris / Orly	France
LFPT	Pontoise - Cormeilles Airport	Pontoise / Cormeilles-en-Vexin	France
LFPV	Vélizy - Villacoublay Air Base	Villacoublay Vélizy	France
LFPZ	Saint Cyr l'Ecole Airport	Saint Cyr l'École	France
LFQA	Reims - Prunay Airport	Reims / Prunay	France
LFQB	Troyes - Barberey Airport	Troyes / Barberey	France
LFQE	Etain Rouvres Airport	Etain	France
LFQG	Nevers - Fourchambault Airport	Nevers / Fourchambault	France
LFQL	Lens Benifontaine Airport	Lens	France
LFQM	Besançon - La Vèze Airport	Besançon / La Vèze	France
LFQP	Phalsbourg Bourscheid Airport	Phalsbourg	France
LFQQ	Lille Airport	Lille / Lesquin	France
LFQT	Merville - Calonne Airport	Merville / Calonne	France
LFRB	Brest Bretagne Airport	Brest / Guipavas	France
LFRC	Cherbourg - Manche Airport	Cherbourg	France
LFRD	Dinard - Pleurtuit - Saint-Malo Airport	Dinard / Pleurtuit / Saint-Malo	France
LFRG	Deauville Normandie Airport	Saint Gatien des Bois	France
LFRH	Lorient - Lann - Bihoué Airport	Lorient / Lann / Bihoué	France
LFRI	La Roche sur Yon Airport	La Roche sur Yon / Les Ajoncs	France
LFRJ	Landivisiau Air Base	Landivisiau	France
LFRK	Caen - Carpiquet Airport	Caen / Carpiquet	France
LFRM	Le Mans - Arnage Airport	Le Mans / Arnage	France
LFRN	Rennes - Saint-Jacques Airport	Rennes / Saint-Jacques	France
LFRO	Lannion Airport	Lannion	France
LFRQ	Quimper - Cornouaille Airport	Quimper / Pluguffan	France
LFRS	Nantes Atlantique Airport	Nantes / Bouguenais	France
LFRT	Saint-Brieuc - Armor Airport	Saint-Brieuc / Armor	France
LFRU	Morlaix - Ploujean Airport	Morlaix Ploujean	France
LFRV	Vannes - Meucon Airport	Vannes / Meucon	France
LFRZ	Saint-Nazaire - Montoir Airport	Saint-Nazaire Montoir	France
LFSB	Bale - Mulhouse Airport	Bâle / Mulhouse	France
LFSD	Dijon - Bourgogne Airport	Dijon / Longvic	France
LFSG	Épinal - Mirecourt Airport	Épinal /Mirecourt	France
LFSI	Saint-Dizier - Robinson Air Base	Saint-Dizier / Robinson	France
LFSL	Brive - Souillac Airport	Brive / Souillac	France
LFSM	Montbéliard - Courcelles Airport	Montbéliard / Courcelles	France
LFSN	Nancy - Essey Airport	Nancy / Essey	France
LFST	Strasbourg Airport	Strasbourg Entzheim	France
LFTH	Hyères - Le Palyvestre Airport	Hyères Le Palyvestre	France
LFTW	Nîmes - Alès - Camargue - Cévennes Airport	Nîmes / Garons	France
LFTZ	La Môle Airport	La Môle	France
LFYS	Sainte Leocadie Airport	Sainte Leocadie	France

Germany

Identifrier	Aerodrome Name	City	Country
EDAB	Bautzen Airport	Bautzen	Germany
EDAC	Leipzig - Altenburg Airport	Altenburg	Germany
EDAH	Heringsdorf Airport	Heringsdorf	Germany
EDAY	Strausberg Airport	Strausberg	Germany
EDAZ	Schoenhagen Airport	Schoenhagen	Germany
EDBH	Barth Airport	Barth	Germany
EDBM	Magdeburg Airport	Magdeburg	Germany
EDBN	Neubrandenburg Airport	Neubrandenburg	Germany
EDDB	Berlin Brandenburg Airport	Berlin	Germany
EDDC	Dresden Airport	Dresden / Klotzsche	Germany
EDDE	Erfurt - Weimar Airport	Erfurt	Germany

**Denotes new airport coverage for the current cycle*

EDDF	Frankfurt Main Airport	Frankfurt am Main	Germany
EDDG	Münster Osnabrück Airport	Münster / Osnabrück	Germany
EDDH	Hamburg Airport	Hamburg / Fuhlsbüttel	Germany
EDDK	Köln Bonn Airport	Cologne / Bonn	Germany
EDDL	Düsseldorf Airport	Düsseldorf	Germany
EDDM	Muenchen Airport	Muenchen	Germany
EDDN	Nurnberg Airport	Nurnberg	Germany
EDDP	Leipzig / Halle Airport	Leipzig	Germany
EDDR	Saarbruecken Airport	Saarbruecken	Germany
EDDS	Stuttgart Airport	Stuttgart	Germany
EDDV	Hannover - Langenhagen Airport	Hannover	Germany
EDDW	Bremen Airport	Bremen	Germany
EDFH	Frankfurt - Hahn Airport	Hahn	Germany
EDFM	Mannheim City Airport	Mannheim	Germany
EDFQ	Allendorf / Eder Airport	Allendorf / Eder	Germany
EDHI	Hamburg - Finkenwerder Airport	Hamburg / Finkenwerder	Germany
EDHK	Kiel Airport	Kiel	Germany
EDHL	Luebeck Airport	Luebeck	Germany
EDJA	Memmingen Airport	Memmingen / Allgäu	Germany
EDLN	Monchengladbach Airport	Mönchengladbach	Germany
EDLP	Paderborn Lippstadt Airport	Paderborn / Lippstadt	Germany
EDLV	Niederrhein Airport	Niederrhein	Germany
EDLW	Dortmund Airport	Dortmund	Germany
EDMA	Augsburg Airport	Augsburg	Germany
EDME	Eggenfelden Airport	Eggenfelden	Germany
EDMO	Oberpfaffenhofen Airport	Oberpfaffenhofen	Germany
EDMS	Straubing Airport	Straubing	Germany
EDNY	Freidrechshafen Airport	Freidrechshafen	Germany
EDQA	Bamberg-Breitenau Airport	Bamberg	Germany
EDQC	Coburg - Brandensteinsebene Airport	Coburg	Germany
EDQD	Bayreuth Airport	Bayreuth	Germany
EDQG	Giebelstadt Airport	Giebelstadt	Germany
EDQM	Hof - Plauen Airport	Hof / Plauen	Germany
EDRZ	Zweibrücken Airport	Zweibrücken	Germany
EDSB	Karlsruhe - Baden-Baden Airport	Baden-Baden	Germany
EDTD	Donaueschingen - Villingen Airport	Donaueschingen	Germany
EDTL	Black Forest Airport	Lahr	Germany
EDTM	Mengen - Hohentengen Airport	Mengen	Germany
EDTY	Schwabisch Hall Airport	Schwabisch	Germany
EDVE	Braunschweig - Wolfsburg Airport	Braunschweig	Germany
EDVK	Kassel Calden Airport	Kassel	Germany
EDWE	Emden Airport	Emden	Germany
EDWI	Wilhelmshaven "JadeWeser" Airport	Wilhelmshaven / Mariensi	Germany
EDXW	Sylt Airport	Sylt	Germany
ETHA	Altenstadt Airport	Altenstadt	Germany
ETHB	Bueckeburg Airport	Bueckeburg	Germany
ETHC	Celle Airport	Celle	Germany
ETHF	Frizlar Airport	Frizlar	Germany
ETHL	Lauphein Air Base	Lauphein	Germany
ETHN	Niederstetten Airport	Niederstetten	Germany
ETHS	Faßberg Air Base	Faßberg	Germany
ETMN	Nordholz Airport	Nordholz	Germany
ETND	Diepholz Air Base	Diepholz	Germany
ETNG	NATO Air Base Geilenkirchen	Geilenkirchen / Teveren	Germany
ETNH	Hohn Air Base	Hohn	Germany
ETNL	Laage Airport	Laage	Germany
ETNN	Nörvenich Airport	Nörvenich	Germany
ETNS	Schleswig Air Base	Schleswig / Jagel	Germany
ETNT	Wittmundhafen Airport	Wittmund	Germany
ETNW	Wunstorf Air Base	Wunstorf	Germany
ETSB	Büchel Air Base	Büchel	Germany

**Denotes new airport coverage for the current cycle*

ETSH	Holzdorf Airport	Holzdorf	Germany
ETSI	Ingolstadt/Manching Airport	Ingolstadt	Germany
ETSL	Lechfeld Airport	Lechfeld	Germany
ETSN	Neuburg Airport	Neuburg	Germany
ETWM	Meppen Airport	Meppen	Germany

Greece

Identifier	Aerodrome Name	City	Country
LGAL	Dimokritos Airport	Alexandroupolis	Greece
LGAV	Eleftherios Venizelos Airport	Athinai	Greece
LGBL	Nea Anchialos Airport	Almiros	Greece
LGHI	Chios Airport	Chios	Greece
LGIK	Ikaria Airport	Ikaria	Greece
LGIO	King Pyrrros Airport	Ioannina	Greece
LGIR	Nikos Kazantzakis Airport	Iraklion	Greece
LGKA	Aristotelis Airport	Kastoria	Greece
LGKC	Kithira Airport	Kithira	Greece
LGKF	Kefallinia Airport	Kefallinia	Greece
LGKJ	Kastelorizo Airport	Kastelorizo	Greece
LGKL	Kalamata Airport	Kalamata	Greece
LGKM	Lydia Aerodrome	Kavala-Amygdaleon	Greece
LGKO	Ippokratris Airport	Kos	Greece
LGKP	Karpathos Airport	Karpathos	Greece
LGKR	Ioannis Kapodistrias Airport	Kerkira	Greece
LGKS	Kassos Airport	Kassos	Greece
LGKV	Megas Alexandros Airport	Kavala	Greece
LGKY	Kalymnos Airport	Kalymnos	Greece
LGKZ	Filippos Airport	Kozani	Greece
LGLE	Leros Airport	Leros	Greece
LGLM	Limnos Airport	Limnos	Greece
LGMK	Mikonos Airport	Mikonos	Greece
LGML	Milos Airport	Milos	Greece
LGMT	Odysseas Elytis Airport	Mitilini	Greece
LGNX	Naxos Airport	Naxos	Greece
LGPA	Paros Airport	Paros	Greece
LGPL	Astypalaia Airport	Astypalaia	Greece
LGPZ	Preveza/Aktio Airport	Preveza	Greece
LGRP	Diagoras Airport	Rodos	Greece
LGRX	Araxos Airport	Araxos	Greece
LGSA	Ioannis Daskalogiannis Airport	Chania	Greece
LGSK	Alexandros Papadiamandis Airport	Skiathos	Greece
LGSM	Aristarchos of Samos Airport	Samos	Greece
LGSO	Dimitrios Vikelas Airport	Syros	Greece
LGSR	Santorini Airport	Santorini	Greece
LGST	Sitia Airport	Sitia	Greece
LGTS	Makedonia Airport	Thessaloniki	Greece
LGZA	Dionisios Solomos Airport	Zakinthos	Greece

Greenland

Identifier	Aerodrome Name	City	Country
BGAA	Aaslaa Airport	Aaslaa	Greenland
BGBW	Narsaruaq Airport	Narsaruaq	Greenland
BGCO	Nerlerit Inaat Airport	Nerlerit Inaat	Greenland
BGGH	Nuuk Airport	Nuuk	Greenland
BGJN	Ilullssat Airport	Ilullssat	Greenland
BGKK	Kulusuk Airport	Kulusuk	Greenland
BGMQ	Manlltsoq Airport	Manlltsoq	Greenland
BGPT	Paamlut Airport	Paamlut	Greenland
BGQQ	Qaanaaq Airport	Qaanaaq	Greenland

**Denotes new airport coverage for the current cycle*

BGSF	Kangerlussuaq Airport	Kangerlussuaq	Greenland
BGSS	Sisimlut Airport	Sisimlut	Greenland
BGUK	Upernavik Airport	Upernavik	Greenland
BGUQ	Uummannaq - Qaarsut Airport	Uummannaq / Qaarsut	Greenland

Hungary

Identifier	Aerodrome Name	City	Country
LHBC	Békéscsaba Airport	Békéscsaba	Hungary
LHBP	Budapest - Ferenc Liszt International Airport	Budapest	Hungary
LHDC	Debrecen Airport	Debrecen	Hungary
LHKE	Kecskemét Airport	Kecskemét	Hungary
LHNY	Nyíregyháza Airport	Nyíregyháza	Hungary
LHPA	Pápa Air Base	Pápa	Hungary
LHPP	Pécs - Pogány Airport	Pécs / Pogány	Hungary
LHPR	Győr - Pér Airport	Győr / Pér	Hungary
LHSM	Hévíz-Balaton Airport	Sármellék	Hungary
LHSN	Szolnok Airport	Szolnok	Hungary
LHUD	Szeged Airport	Szeged	Hungary

Iceland

Identifier	Aerodrome Name	City	Country
BIAR	Akureyri Airport	Akureyri	Iceland
BIBD	Bíldudalur Airport	Bíldudalur	Iceland
BIEG	Egilsstaðir Airport	Egilsstaðir	Iceland
BIGR	Grímsey Airport	Grímsey	Iceland
BIHN	Hornafjörður Airport	Hornafjörður	Iceland
BIHU	Husavik Airport	Husavik	Iceland
BIIS	Ísafjörður Airport	Ísafjörður	Iceland
BIKF	Keflavik Airport	Keflavik	Iceland
BIKR	Sauðárkrókur Airport	Sauðárkrókur	Iceland
BIRK	Reykjavik Airport	Reykjavik	Iceland
BIVM	Vestmannaeyjar Airport	Vestmannaeyjar	Iceland
BIVO	Vopnafjörður Airport	Vopnafjörður	Iceland

Ireland

Identifier	Aerodrome Name	City	Country
EICK	Cork Airport	Cork	Ireland
EIDL	Donegal Airport	Donegal	Ireland
EIDW	Dublin Airport	Dublin	Ireland
EIKN	Ireland West Airport	Knock	Ireland
EIKY	Kerry Airport	Kerry	Ireland
EINN	Shannon Airport	Shannon	Ireland
EISG	Sligo Airport	Sligo	Ireland
EIWF	Waterford Airport	Waterford	Ireland
EIWT	Weston Airport	Dublin	Ireland

Italy

Identifier	Aerodrome Name	City	Country
LIAF	Foligno Airport	Foligno	Italy
LIAP	L'aquila - Parchi Airport	L'aquila	Italy
LIBC	Crotone Airport	Crotone	Italy
LIBD	Bari - Palese Airport	Bari	Italy
LIBF	Foggia "Gino Lisa" Airport	Foggia	Italy
LIBG	Taranto - Grottaglie Airport	Taranto	Italy
LIBP	Pescara Airport	Pescara	Italy
LIBR	Brindisi - Casale Airport	Brindisi	Italy
LICA	Lamezia Terme Airport	Lamezia Terme	Italy
LICB	Comiso Airport	Comiso	Italy

**Denotes new airport coverage for the current cycle*

LICC	Catania - Fontanarossa Airport	Catania	Italy
LICD	Lampedusa Airport	Lampedusa	Italy
LICG	Pantelleria Airport	Pantelleria	Italy
LICJ	Palermo - Punta Raisi Airport	Palermo	Italy
LICR	Reggio Calabria Airport	Reggio Calabria	Italy
LICT	Trapani - Birgi Airport	Trapani	Italy
LIDA	Asiago Airport	Asiago	Italy
LIDB	Belluno Airport	Belluno	Italy
LIDE	Reggio Emilia Airport	Reggio Emilia	Italy
LIDF	Fano Airport	Fano	Italy
LIDR	Ravenna Airport	Ravenna	Italy
LIDT	Trento - Mattarello Airport	Trento	Italy
LIEA	Alghero - Fertilia Airport	Alghero, Sardinia	Italy
LIEE	Cagliari - Elmas Airport	Cagliari	Italy
LIEO	Olbia - Costa Smeralda Airport	Olbia, Sardinia	Italy
LIET	Tortoli' Airport	Arbatax	Italy
LILE	Biella - Cerrione Airport	Biella	Italy
LILN	Varese/Venegono Airport	Varese	Italy
LILQ	Massa-Cinquale Municipal Airport	Massa	Italy
LIMA	Torino - Aerialia Airport	Torino	Italy
LIMB	Milano - Bresso Airport	Milano	Italy
LIMC	Milano - Malpensa Airport	Milano	Italy
LIME	Bergamo - Orio Al Serio Airport	Bergamo	Italy
LIMF	Torino - Caselle Airport	Torino	Italy
LIMG	Albenga/Riviera Airport	Albenga	Italy
LIMJ	Genova - Sestri Airport	Genova	Italy
LIML	Milano - Linate Airport	Milano	Italy
LIMP	Parma Airport	Parma	Italy
LIMW	Aosta Airport	Aosta	Italy
LIMZ	Cuneo - Levaldigi Airport	Cuneo	Italy
LINL	Lecce-San Cataldo Airport	Lecce	Italy
LIPB	Bolzano Airport	Bolzano	Italy
LIPD	Udine/Campoformido Airport	Udine	Italy
LIPE	Bologna - Borgo Panigale Airport	Bologna	Italy
LIPH	Treviso - S. Angelo Airport	Treviso	Italy
LIPK	Forli Airport	Forlì	Italy
LIPN	Verona - Boscomantico Airport	Verona	Italy
LIPO	Brescia - Montichiari Airport	Brescia	Italy
LIPQ	Trieste - Ronchi dei Legionari Airport	Trieste / Ronchi dei Legionari	Italy
LIPR	Rimini Airport	Rimini	Italy
LIPU	Padova Airport	Padova	Italy
LIPV	Venezia Airport	Venezia	Italy
LIPX	Verona - Villafranca Airport	Verona	Italy
LIPY	Ancona - Falconara Airport	Ancona	Italy
LIPZ	Venezia - Tessera Airport	Venezia	Italy
LIQL	Lucca - Tassignano Airport	Lucca	Italy
LIQN	Rieti Airport	Rieti	Italy
LIQS	Siena - Ampugnano Airport	Siena	Italy
LIQW	Sarzana Airport	Sarzana	Italy
LIRA	Roma - Ciampino Airport	Roma	Italy
LIRF	Roma - Fiumicino Airport	Roma	Italy
LIRG	Guidonia Airport	Guidonia	Italy
LIRI	Salerno Pontecagnano Airport	Salerno	Italy
LIRJ	Marina Di Campo Airport	Marina Di Campo	Italy
LIRL	Latina Airport	Latina	Italy
LIRN	Napoli - Capodichino Airport	Napoli	Italy
LIRP	Pisa - San Giusto Airport	Pisa	Italy
LIRQ	Firenze - Peretola Airport	Firenze	Italy
LIRS	Grosseto Airport	Grosseto	Italy

**Denotes new airport coverage for the current cycle*

LIRU	Roma - Urbe Airport	Roma	Italy
LIRV	Viterbo Airport	Viterbo	Italy
LIRZ	Perugia - Sant' Francesco Airport	Perugia	Italy

Jordan

Identifier	Aerodrome Name	City	Country
OJAI	Amman - Queen Alia International Airport	Amman	Jordan
OJAM	Amman - Marka Airport	Amman	Jordan
OJAQ	Aqaba - King Hussein International Airport	Aqaba	Jordan

Latvia

Identifier	Aerodrome Name	City	Country
EVAD	Adaži Airport	Adaži	Latvia
EVCA	Cesis Airport	Cesis	Latvia
EVGA	Lielvarde Air Base	Lielvarde	Latvia
EVLA	Liepāja Airport	Liepāja	Latvia
EVLI	Limbazi Airport	Limbazi	Latvia
EVPA	Ikshkile Airport	Ikshkile	Latvia
EVRA	Riga Airport	Riga	Latvia
EVRS	Spilve Airport	Riga	Latvia
EVVA	Ventspils Airport	Ventspils	Latvia

Lithuania

Identifier	Aerodrome Name	City	Country
EYKA	Kaunas International Airport	Kaunas	Lithuania
EYPA	Palanga International Airport	Palanga	Lithuania
EYSA	Šiauliai International Airport	Šiauliai	Lithuania
EYVI	Vilnius Airport	Vilnius	Lithuania

Luxembourg

Identifier	Aerodrome Name	City	Country
ELIX	Luxembourg Airport	Luxembourg	Luxembourg

Macedonia

Identifier	Aerodrome Name	City	Country
LWOH	Ohrid Airport	Ohrid	Macedonia
LWSK	Skopje International Airport	Skopje	Macedonia

Malta

Identifier	Aerodrome Name	City	Country
LMML	Malta - Luqa Airport	Malta	Malta

Moldova

Identifier	Aerodrome Name	City	Country
LUBM	Mărculești International Airport	Mărculești	Moldova
LUKH	Horesti/National Airport	Horesti	Moldova
LUKK	Chișinău International Airport	Chișinău	Moldova

Netherlands

Identifier	Aerodrome Name	City	Country
EHAL	Ameland Airport	Ballum	Netherlands
EHAM	Amsterdam - Schiphol Airport	Amsterdam / Schiphol	Netherlands
EHBD	Weert - Budel Airport	Weert	Netherlands
EHBK	Maastricht Aachen Airport	Maastricht	Netherlands

**Denotes new airport coverage for the current cycle*

EHDL	Deelen Airport	Deelen	Netherlands
EHDR	Drachten Airport	Drachten	Netherlands
EHEH	Eindhoven - Eindhoven Airport	Eindhoven	Netherlands
EHGG	Groningen - Eelde Airport	Groningen / Eelde	Netherlands
EHGR	Gilze-Rijen Airport	Gilze-Rijen	Netherlands
EHHO	Hoogeveen Airport	Hoogeveen	Netherlands
EHKD	Den Helder - De Kooy Airport	Den Helder	Netherlands
EHLE	Lelystad Airport	Lelystad	Netherlands
EHLW	Leeuwarden Airport	Leeuwarden	Netherlands
EHMZ	Middelburg - Midden-Zeeland Airport	Middelburg	Netherlands
EHOW	Oostwold Airport	Oostwold	Netherlands
EHRD	Rotterdam Airport	Rotterdam	Netherlands
EHSE	Breda International Airport	Breda	Netherlands
EHST	Stadskanaal Airport	Stadskanaal	Netherlands
EHTE	Deventer - Teuge Airport	Deventer	Netherlands
EHTW	Enschede - Twenthe Airport	Enschede	Netherlands
EHVK	Volkel Airport	Volkel	Netherlands
EHWO	Woensdrecht Airport	Woensdrecht	Netherlands

Norway

Identifier	Aerodrome Name	City	Country
ENAL	Ålesund - Vigra Airport	Ålesund / Vigra	Norway
ENAN	Andøya Airport	Andøya	Norway
ENAT	Alta Airport	Alta	Norway
ENBL	Førde - Bringeland Airport	Førde / Bringeland	Norway
ENBN	Brønnøysund - Brønnøy Airport	Brønnøysund / Brønnøy	Norway
ENBO	Bodø Airport	Bodø	Norway
ENBR	Bergen - Flesland Airport	Bergen / Flesland	Norway
ENBS	Båtsfjord Airport	Båtsfjord	Norway
ENBV	Berlevåg Airport	Berlevåg	Norway
ENCN	Kristiansand - Kjevik Airport	Kristiansand / Kjevik	Norway
ENDU	Bardufoss Airport	Bardufoss	Norway
ENEV	Harstad - Narvik Airport	Harstad / Narvik	Norway
ENFL	Florø Airport	Florø	Norway
ENGK	Arendal Gullknapp Airport	Arendal	Norway
ENGM	Oslo - Gardermoen Airport	Oslo / Gardermoen	Norway
ENHD	Haugesund - Karmøy Airport	Haugesund / Karmøy	Norway
ENHF	Hammerfest Airport	Hammerfest	Norway
ENHK	Hasvik Airport	Hasvik	Norway
ENHV	Honningsvåg - Valan Airport	Honningsvåg / Valan	Norway
ENKB	Kristiansund - Kvernberget Airport	Kristiansund / Kvernberget	Norway
ENKJ	Kjeller Airport	Kjeller	Norway
ENKR	Kirkenes - Høybuktnoen Airport	Kirkenes / Høybuktnoen	Norway
ENLK	Leknes Airport	Leknes	Norway
ENMH	Mehamn Airport	Mehamn	Norway
ENML	Molde - Årø Airport	Molde / Årø	Norway
ENMS	Mosjøen - Kjærstad Airport	Mosjøen / Kjærstad	Norway
ENNA	Lakselv - Banak Airport	Lakselv / Banak	Norway
ENNM	Namsos Airport	Namsos	Norway
ENNO	Notodden Airport	Notodden	Norway
ENOL	Ørland Airport	Ørland	Norway
ENOV	Ørsta - Volda Airport	Ørsta / Volda / Hovden	Norway
ENRA	Mo i Rana - Røssvoll Airport	Mo i Rana / Røssvoll	Norway
ENRM	Rørвик - Ryum Airport	Rørvik / Ryum	Norway
ENRO	Røros Airport	Røros	Norway
ENRS	Røst Airport	Røst	Norway
ENRY	Moss - Rygge Airport	Moss / Rygge	Norway
ENSB	Svalbard - Longyear Airport	Svalbard / Longyear	Norway
ENSD	Sandane - Anda Airport	Sandane / Anda	Norway
ENSG	Sogndal - Haukåsen Airport	Sogndal / Haukåsen	Norway

**Denotes new airport coverage for the current cycle*

ENSH	Svolvær - Helle Airport	Svolvær / Helle	Norway
ENSK	Stomarknes - Skagen Airport	Stomarknes / Skagen	Norway
ENSO	Stord - Sørstokken Airport	Stord / Sørstokken	Norway
ENSR	Sørkjosen Airport	Sørkjosen	Norway
ENSS	Vardø - Svartnes Airport	Vardø / Svartnes	Norway
ENST	Sandnessjøen - Stokka Airport	Sandnessjøen / Stokka	Norway
ENTC	Tromsø Langnes Airport	Tromsø Langnes	Norway
ENTO	Sandefjord - Torp Airport	Sandefjord / Torp	Norway
ENVA	Trondheim - Værnes Airport	Trondheim / Værnes	Norway
ENVD	Vadsø Airport	Vadsø	Norway
ENZV	Stavanger - Sola Airport	Stavanger / Sola	Norway

Philippines

Identifier	Aerodrome Name	City	Country
RPLB	Subic Bay Intl	Subic Bay	Philippines
RPLL	Manila/Ninoy Aquino Intl	Manila	Philippines
RPMD	Davao - Francisco Bangoy Intl	Davao	Philippines
RPSP	Bohol-Panglao Airport	Panglao	Philippines
RPVB	Silay - Bacoiod Airport	Silay	Philippines
RPVE	Godofredo P. Ramos Airport	Malay	Philippines
RPVI	Iloilo Airport	Iloilo	Philippines
RPVM	Cebu - Mactan-Cebu International Airport	Cebu	Philippines

Poland

Identifier	Aerodrome Name	City	Country
EPBC	Warszawa/Babice Airport	Warsaw	Poland
EPBO	Borsk Airport	Borsk	Poland
EPBY	Bydgoszcz Airport	Bydgoszcz	Poland
EPCD	Depultycze Krolewskie Airport	Depultycze Krolewskie	Poland
EPDA	Darłowo Airport	Darłowo	Poland
EPDE	Dęblin Airport	Dęblin	Poland
EPGD	Gdańsk Lech Walesa Airport	Gdańsk	Poland
EPGI	Lisie Kąty Airport	Grudziądz	Poland
EPGL	Gliwice Airport	Gliwice	Poland
EPGY	Grady Airfield	Grady	Poland
EPIR	Inowrocław Airport	Inowrocław	Poland
EPKA	Masłów Airport	Kielce	Poland
EPKG	Kołobrzeg Airport	Bagicz	Poland
EPKI	Kikity Airfield	Kikity	Poland
EPKK	Kraków - Balice Airport	Kraków	Poland
EPKM	Muchowiec Airport	Katowice	Poland
EPKO	Korne Airfield	Korne	Poland
EPKS	Krzesiny Airport	Poznan	Poland
EPKT	Katowice - Pyrzowica Airport	Katowice	Poland
EPKW	Kaniów Airfield	Kaniów	Poland
EPLB	Lublin Airport	Lublin	Poland
EPLK	Lask Airport	Lask	Poland
EPLL	Łódź - Lublinek Airport	Łódź	Poland
EPLU	Lubin Airport	Lubin	Poland
EPLY	Łęczycza Airport	Łęczycza	Poland
EPMB	Malbork Airport	Malbork	Poland
EPMI	Mirosławiec Airport	Mirosławiec	Poland
EPML	Mielec Airport	Mielec	Poland
EPMM	Mińsk Mazowiecki Airport	Mińsk Mazowiecki	Poland
EPMO	Modlin Airport	Warszawa	Poland
EPNC	Airfield Chrcynno	Chrcynno	Poland
EPNL	Łososina Dolna Airport	Nowy Sącz	Poland
EPOD	Olsztyn Dajtki Airport	Olsztyn	Poland
EPOK	Oksywie Airport	Gdynia	Poland

***Denotes new airport coverage for the current cycle**

EPOM	Michalków Airport	Ostrów Wielkopolski	Poland
EPPG	Kakolewo Airport	Kakolewo	Poland
EPPI	Piła Airport	Piła	Poland
EPPL	Płock Airport	Płock	Poland
EPPO	Poznań - Ławca Airport	Poznań	Poland
EPPR	Pruszcz Gdański Airport	Pruszcz Gdański	Poland
EPPT	Piotrków Trybunalski Airport	Piotrków Trybunalski	Poland
EPPW	Powidz Airport	Powidz	Poland
EPRA	Radom Airport	Radom	Poland
EPRD	Mazury Air Camp	Radzieje	Poland
EPRJ	Rzeszów Airport	Rzeszów	Poland
EPRP	Piastów Airport	Radomia	Poland
EPRZ	Rzeszów - Jasionka Airport	Rzeszów	Poland
EPSC	Szczecin - Goleniów Airport	Szczecin	Poland
EPSD	Dąbie Airport	Szczecin	Poland
EPSK	Słupsk/Krępa Airport	Słupsk	Poland
EPST	Turbia Airport	Stalowej Woli	Poland
EPSY	Olsztyn-Mazury Airport	Szczytno	Poland
EPTM	Tomaszów Mazowiecki Airport	Tomaszów Mazowiecki	Poland
EPTO	Toruń Airport	Toruń	Poland
EPWA	Warsaw Chopin Airport	Warsaw	Poland
EPWR	Wrocław - Strachowice Airport	Wrocław	Poland
EPWT	Airfield Watorowo Airport	Watorowo	Poland
EPZE	Zerniki Airport	Zerniki	Poland
EPZG	Zielona Góra - Babimost Airport	Zielona Góra	Poland
EPZP	Przylep Airport	Zielona Góra	Poland

Portugal

Identifier	Aerodrome Name	City	Country
LPAZ	Santa Maria Airport	Santa Maria	Portugal
LPBJ	Beja Airport	Beja	Portugal
LPCR	Corvo Airport	Corvo	Portugal
LPCS	Cascais Airport	Cascais	Portugal
LPEV	Évora Airport	Évora	Portugal
LPFL	Flores Airport	Flores	Portugal
LPFR	Faro Airport	Faro	Portugal
LPGR	Graciosa Airport	Graciosa	Portugal
LPHR	Horta Airport	Horta	Portugal
LPLA	Lajes Airport	Lajes	Portugal
LPMA	Madeira Airport	Madeira	Portugal
LPPD	Ponta Delgada - Joao Paulo II Airport	Ponta Delgada	Portugal
LPPI	Pico Airport	Pico	Portugal
LPPR	Porto - Francisco Sá Carneiro Airport	Porto	Portugal
LPPS	Porto Santo Airport	Porto Santo	Portugal
LPPT	Lisboa Airport	Lisboa	Portugal
LPSO	Ponte de Sôr Airport	Ponte de Sôr	Portugal
LPVR	Vila Real Airport	Vila Real	Portugal

Romania

Identifier	Aerodrome Name	City	Country
LRAR	Arad Airport	Arad	Romania
LRBA	Gradistea Airport	Bucharest	Romania
LRBC	Bacau-George Enescu Airport	Bacău	Romania
LRBM	Baia Mare/Maramures Airport	Baia Mare	Romania
LRBN	Bistrita Airport	Bistrita	Romania
LRBS	București - Barnessa-Aurel Viaicu Airport	București	Romania
LRBV	Brasov-Ghimbav Airport	Brasov	Romania
LRCB	Charlie Bravo Siria Airport	Siria	Romania
LRCK	Mihail Kogalniceanu-Constanta Airport	Constanța	Romania

**Denotes new airport coverage for the current cycle*

LRCL	Cluj Napoca - Avram Iancu Airport	Cluj Napoca	Romania
LRCN	Clinceni Airport	Clinceni	Romania
LRCV	Craiova - Craiova Airport	Craiova	Romania
LRDV	Saulesti-Constantin Manolache Airport	Deva	Romania
LRIA	Iași/Iași Airport	Iași	Romania
LROD	Oradea/Oradea Airport	Oradea	Romania
LROP	București/Henri Coanda Airport	București	Romania
LRPT	Geamana Airfield	Pitesti	Romania
LRPW	Gheorghe Valentin Bibescu-Ploiesti Airport	Ploiesti	Romania
LRSB	Sibiu Airport	Sibiu	Romania
LRSM	Satu Mare Airport	Satu Mare	Romania
LRSV	Suceava - Stefan cel Mare Airport	Suceava	Romania
LRTC	Tulcea - Delta Dunarii Airport	Tulcea	Romania
LRTM	Târgu Mureș - Transilvania - Targu Mures Airport	Târgu Mureș	Romania
LRTR	Timisoara - Traian Vuia Airport	Timisoara	Romania
LRTZ	Tuzla Airport	Tuzla	Romania

Serbia-Montenegro

Identifier	Aerodrome Name	City	Country
LYBE	Beograd - Nikola Tesla Airport	Beograd	Serbia-Montenegro
LYBJ	Lisiciji Jarak Airport	Beograd	Serbia-Montenegro
LYBT	Colonel-pilot Milenko Pavlovic Air Base	Beograd	Serbia-Montenegro
LYKA	Brege Airport	Kraljevo	Serbia-Montenegro
LYKS	Rosulje Airport	Kruševac	Serbia-Montenegro
LYKT	Kostolac Airport	Kostolac	Serbia-Montenegro
LYKV	Morava Airport	Ladevci	Serbia-Montenegro
LYNI	Niš - Konstantin Veliki Airport	Niš	Serbia-Montenegro
LYNK	Kapino Polje Airport	Nikšić	Serbia-Montenegro
LYNS	Novi Sad Airport	Čenej	Serbia-Montenegro
LYPA	Pančevo Airport	Pančevo	Serbia-Montenegro
LYPG	Podgorica Airport	Podgorica	Serbia-Montenegro
LYPN	Davidovac Airport	Paraćin	Serbia-Montenegro
LYPO	Ćemovsko Polje Airport	Podgorica	Serbia-Montenegro
LYSD	Radinac Airport	Smederevo	Serbia-Montenegro
LYSM	Veliki Radinci Airport	Sremska Mitrovica	Serbia-Montenegro
LYSP	Rudine Airport	Smederevska Palanka	Serbia-Montenegro
LYSU	Subotica Airport	Subotica	Serbia-Montenegro
LYTR	Trstenik Airport	Trstenik	Serbia-Montenegro
LYTV	Tivat Airport	Tivat	Serbia-Montenegro
LYUZ	Užice-Ponikve Airport	Užice	Serbia-Montenegro
LYVA	Divci Airport	Valjevo	Serbia-Montenegro
LYVR	Vrsac Airport	Vrsac	Serbia-Montenegro
LYZR	Zrenjanin Airport	Ečka	Serbia-Montenegro

Slovakia

Identifier	Aerodrome Name	City	Country
LZIB	Bratislava - M. R. Štefánik Airport	Bratislava	Slovakia
LZKZ	Kosice Airport	Kosice	Slovakia
LZPP	Piešťany Airport	Piešťany	Slovakia
LZTT	Poprad-Tatry Airport	Poprad	Slovakia
LZZI	Žilina Airport	Žilina	Slovakia

Slovenia

Identifier	Aerodrome Name	City	Country
LJAJ	Ajdovščina Aerodrome	Ajdovščina	Slovenia
LJBL	Lesce/Bled Aerodrome	Lesce/Bled	Slovenia
LJBO	Bovec Airport	Bovec	Slovenia
LJCE	Cerklje ob Krki Airport	Cerklje	Slovenia
LJCL	Celje Aerodrome	Celje	Slovenia

**Denotes new airport coverage for the current cycle*

LJDI	Divaca Aerodrome	Divaca	Slovenia
LJLJ	Ljubljana Joze Pucnik Airport	Brnik	Slovenia
LJMB	Maribor Airport	Maribor	Slovenia
LJMS	Murska Sobota Aerodrome	Murska Sobota	Slovenia
LJNM	Novo Mesto Airport	Novo Mesto	Slovenia
LJPZ	Portorož Airport	Portorož	Slovenia
LJSG	Slovenj Gradec Aerodrome	Slovenj Gradec	Slovenia

Spain

Identifier	Aerodrome Name	City	Country
GCFV	El Matorral Airport	Fuerteventura	Canary Islands
GCGM	La Gomera Airport	La Gomera	Canary Islands
GCHI	El Hierro Airport	El Hierro	Canary Islands
GCLA	La Palma Airport	La Palma	Canary Islands
GCLP	Gran Canaria International Airport	Las Palmas	Canary Islands
GCRR	César Manrique-Lanzarote Airport	Lanzarote	Canary Islands
GCTS	Tenerife Sur Airport	Tenerife	Canary Islands
GCXO	Tenerife North-Ciudad de La Laguna Airport	Tenerife	Canary Islands
GEML	Melilla Airport	Melilla	Spain
LEAB	Albacete Airport	Albacete	Spain
LEAL	Alicante-Elche Miguel Hernández Airport	Alicante	Spain
LEAM	Almería Airport	Almería	Spain
LEAS	Asturias Airport	Asturias	Spain
LEBA	Córdoba Airport	Córdoba	Spain
LEBB	Bilbao Airport	Bilbao	Spain
LEBG	Burgos/Villafria Airport	Burgos	Spain
LEBL	Barcelona-El Prat Josep Tarradellas Airport	El Prat	Spain
LEBZ	Badajoz / Talavera La Real Badajoz Airport	Badajoz	Spain
LECH	Castellon Airport	Castellon	Spain
LECO	A Coruña Airport	A Coruña	Spain
LECU	Madrid / Cuatro Vientos Airport	Madrid	Spain
LEDA	Lleida - Alguaire Airport	Lleida	Spain
LEGA	Armillá Air Base	Granada	Spain
LEGE	Girona - Costa Brava Airport	Girona	Spain
LEGR	Federico Garcia Lorca Airport	Granada / Jaén	Spain
LEGT	Madrid - Getafe Airport	Madrid	Spain
LEHC	Huesca - Pirineos Airport	Huesca	Spain
LEIB	Ibiza Airport	Ibiza	Balearic Islands
LEJR	Jerez Airport	Jerez de la Frontera, Cádiz	Spain
LELC	Murcia - San Javier Airport	Murcia / San Javier	Spain
LELL	Sabadell Airport	Sabadell	Spain
LELN	León Air Base	León	Spain
LEMD	Madrid Barajas International Airport	Madrid	Spain
LEMG	Málaga Airport	Málaga	Spain
LEMH	Menorca Airport	Menorca	Balearic Islands
LEMI	Región de Murcia International Airport	Murcia	Spain
LEMO	Morón Air Base	Morón de la Frontera / Seville	Spain
LEPA/LESJ	Palma De Mallorca Airport	Palma De Mallorca	Balearic Islands
LEPP	Pamplona - Nôain Airport	Pamplona	Spain
LERI	Alcantarilla Air Base	Alcantarilla	Spain
LERJ	Logroño Airport	Logroño	Spain
LERL	Ciudad Real Central Airport	Ciudad Real	Spain
LERS	Reus Airport	Reus	Spain
LERT	Cadiz - Rota Airport	Rota	Spain
LESA	Salamanca Airport	Salamanca	Spain
LESB	Mallorca - Son Bonet Airport	Mallorca	Spain
LESO	San Sebastián Airport	San Sebastián, Guipuscoa	Spain
LEST	Santiago - Rosalía de Castro Airport	Santiago de Compostela	Spain
LESU	La Seu D'Urgell Airport	Andorra	Spain
LETL	Teruel Airport	Teruel	Spain

**Denotes new airport coverage for the current cycle*

LETO	Madrid - Torrejon Airport	Madrid	Spain
LEVC	Valencia Airport	Valencia	Spain
LEVD	Valladolid/Villanubla Airport	Valladolid	Spain
LEVT	Vitoria Airport	Vitoria - Gasteiz / Foronda	Spain
LEVX	Vigo - Peinador Airport	Vigo, Pontevedra	Spain
LEXJ	Santander Airport	Santander	Spain
LEZG	Zaragoza Airport	Zaragoza	Spain
LEZL	Sevilla Airport	Sevilla	Spain

Sweden

Identifier	Aerodrome Name	City	Country
ESCF	Linköping/Malmen Airport	Linköping	Sweden
ESCM	Arna Airport	Uppsala	Sweden
ESDF	Ronneby Airport	Ronneby	Sweden
ESGG	Göteborg/Landvetter Airport	Göteborg	Sweden
ESGJ	Jönköping Airport	Jönköping	Sweden
ESGT	Trollhättan-Vänersborg Airport	Trollhättan / Vänersborg	Sweden
ESIB	Såtenäs Airport	Såtenäs	Sweden
ESKM	Mora/Siljan Airport	Mora	Sweden
ESKN	Stockholm/Skavsta Airport	Stockholm	Sweden
ESMK	Kristianstad Airport	Kristianstad	Sweden
ESMQ	Kalmar Airport	Kalmar	Sweden
ESMS	Malmö Airport	Malmö	Sweden
ESMT	Halmstad Airport	Halmstad	Sweden
ESMX	Växjö/Kronoberg Airport	Växjö	Sweden
ESND	Sveg Airport	Sveg	Sweden
ESNG	Gällivare Airport	Gällivare	Sweden
ESNK	Kramfors/Sollefteå Airport	Kramfors/Sollefteå	Sweden
ESNL	Lycksele Airport	Lycksele	Sweden
ESNN	Sundsvall-Timrå Airport	Timrå	Sweden
ESNO	Örnsköldsvik Airport	Örnsköldsvik	Sweden
ESNQ	Kiruna Airport	Kiruna	Sweden
ESNS	Skellefteå Airport	Skellefteå	Sweden
ESNU	Umeå Airport	Umeå	Sweden
ESNV	Vilhelmina Airport	Vilhelmina	Sweden
ESNX	Arvidsjaur Airport	Arvidsjaur	Sweden
ESNZ	Åre Östersund Airport	Åre Östersund	Sweden
ESOE	Örebro Airport	Örebro	Sweden
ESOH	Hagfors Airport	Hagfors	Sweden
ESOK	Karlstad Airport	Karlstad	Sweden
ESOW	Stockholm/Västerås Airport	Stockholm/Västerås	Sweden
ESPA	Luleå/Kallax Airport	Luleå	Sweden
ESSA	Stockholm/Arlanda Airport	Stockholm	Sweden
ESSB	Stockholm/Bromma Airport	Stockholm	Sweden
ESSD	Borlänge Airport	Borlänge	Sweden
ESSL	Linköping/SAAB Airport	Linköping	Sweden
ESSP	Norrköping/Kungsängen Airport	Norrköping	Sweden
ESST	Torsby Airport	Torsby	Sweden
ESSU	Eskilstuna Airport	Eskilstuna	Sweden
ESSV	Visby Airport	Visby	Sweden
ESTA	Ängelholm Airport	Ängelholm	Sweden
ESTL	Ljungbyhed Airport	Ljungbyhed	Sweden
ESUP	Pajala Airport	Pajala	Sweden
ESUT	Hemavan/Tärnaby Airport	Hemavan	Sweden

Switzerland

Identifier	Aerodrome Name	City	Country
LSGC	Les Eplatures Airport	Les Eplatures	Switzerland
LSGG	Geneva Airport	Geneva	Switzerland

**Denotes new airport coverage for the current cycle*

LSGS	Sion Airport	Sion	Switzerland
LSMP	Payerne Airport	Payerne	Switzerland
LSZA	Lugano Airport	Lugano	Switzerland
LSZB	Berne - Belp Airport	Bern / Belp	Switzerland
LSZC	Buochs Airport	Buochs	Switzerland
LSZG	Grenchen Airport	Grenchen	Switzerland
LSZH	Zürich Airport	Zürich	Switzerland
LSZR	St. Gallen - Altenrhein Airport	St. Gallen / Altenrhein	Switzerland
LSZS	Samedan Airport	Samedan	Switzerland

Turkey

Identifier	Aerodrome Name	City	Country
LTAC	Esenboğa Airport	Ankara	Turkey
LTAD	Etimesgut Airport	Ankara	Turkey
LTAE	Murted Air Base	Ankara	Turkey
LTAF	Adana Airport	Adana	Turkey
LTAH	Afyon Airport	Afyon	Turkey
LTAI	Antalya International Airport	Antalya	Turkey
LTAJ	Gaziantep Airport	Gaziantep	Turkey
LTAL	Kastamonu Airport	Kastamonu	Turkey
LTAN	Konya Airport	Konya	Turkey
LTAO	Malatya/Tulga Airport	Malatya	Turkey
LTAP	Merzifon Airport	Amasya	Turkey
LTAR	Nuri Demirağ Airport	Sivas	Turkey
LTAS	Çaycuma Airport	Zonguldak	Turkey
LTAT	Malatya Airport	Malatya	Turkey
LTAU	Kayseri Airport	Kayseri	Turkey
LTAV	Sivrihisar Airport	Eskisehir	Turkey
LTAW	Tokat Airport	Tokat	Turkey
LTAY	Çardak Airport	Denizli	Turkey
LTAZ	Kapadokya Airport	Nevşehir	Turkey
LTBA	Atatürk Airport	Istanbul	Turkey
LTBD	Çıldır Airport	Aydin	Turkey
LTBF	Merkez Airport	Balikesir	Turkey
LTBG	Bandırma Airport	Balıkesir	Turkey
LTBH	Çanakkale Airport	Çanakkale	Turkey
LTBI	Eskisehir Airport	Eskisehir	Turkey
LTBJ	Adnan Menderes Airport	Izmir	Turkey
LTBL	İzmir/Çiğli Airport	İzmir/Çiğli	Turkey
LTBN	Kütahya Air Base	Kütahya	Turkey
LTBO	Uşak Airport	Uşak	Turkey
LTBQ	Cengiz Topel Airport	Kocaeli	Turkey
LTBR	Yenişehir Airport	Bursa	Turkey
LTBS	Dalaman Airport	Muğla	Turkey
LTBT	Akhisar Airport	Manisa	Turkey
LTBU	Tekirdag Çorlu Atatürk Airport	Çorlu	Turkey
LTBW	Hezarfen Airport	Istanbul	Turkey
LTBY	Hasan Polatkan Airport	Eskişehir	Turkey
LTBZ	Zafer Airport	Zafer	Turkey
LTCA	Elaziğ Airport	Elaziğ	Turkey
LTCB	Ordu-Giresun Airport	Ordu-Giresun	Turkey
LTCC	Diyarbakir Airport	Diyarbakir	Turkey
LTCD	Erzincan Yildirim Akbulut Airport	Erzincan	Turkey
LTCE	Erzurum Airport	Erzurum	Turkey
LTCF	Kars Harakani Airport	Kars	Turkey
LTCG	Trabzon Airport	Trabzon	Turkey
LTCI	Ferit Melen Airport	Van	Turkey
LTCJ	Batman Airport	Batman	Turkey
LTCK	Muş Sultan Alparslan Airport	Muş	Turkey
LTCL	Siirt Airport	Siirt	Turkey

**Denotes new airport coverage for the current cycle*

LTCM	Sinop Airport	Sinop	Turkey
LTCN	K. Maras Airport	Kahramanmaraş	Turkey
LTCO	Ağrı Ahmed-i Hani Airport	Ağrı	Turkey
LTCP	Adiyaman Airport	Adiyaman	Turkey
LTCR	Mardin Airport	Mardin	Turkey
LTCS	Şanlıurfa - Gap Airport	Şanlıurfa	Turkey
LTCT	Iğdir/Sehit Bulent Aydin Airport	Iğdir	Turkey
LTCU	Bingöl Airport	Bingöl	Turkey
LTCV	Şirnak Airport	Şirnak	Turkey
LTCW	Hakkari Yüksekova Selahaddin Eyyubi Airport	Yüksekova	Turkey
LTDA	Hatay Airport	Hatay	Turkey
LTDB	Çukurova International Airport	Adana	Turkey
LTFA	Kaklic Airport	Izmir	Turkey
LTFB	Efes Airport	Selcuk	Turkey
LTFC	Süleyman Demirel Airport	Isparta	Turkey
LTFD	Balikesir -Koca Seyit Airport	Balikesir	Turkey
LTFE	Milas-Bodrum Airport	Muğla	Turkey
LTFG	Gazipaşa Airport	Antalya	Turkey
LTFH	Çarşamba Airport	Samsun	Turkey
LTFJ	Sabiha Gökçen Airport	Istanbul	Turkey
LTFK	Gökçeada Airport	Gökçeada	Turkey
LTFM	Istanbul Airport	Istanbul	Turkey
LTFN	Isparta/Kilic Airport	Kilic	Turkey
LTFO	Rize-Artvin Airport	Rize	Turkey

Ukraine

Identifier	Aerodrome Name	City	Country
UKBB	Киев/Борисполь Международный Аэропорт	Kyiv/Boryspil`	Ukraine
UKDD	Днепропетровск Международный Аэропорт	Dnipro	Ukraine
UKDE	Запорожье/Мокрая Международный Аэропорт	Zaporizhzhia	Ukraine
UKDR	Кривой Рог/Лозоватка Международный Аэропорт	Kryvyi Rih/Lozuvatka	Ukraine
UKHD	Харьков/Сокольники	Kharkiv	Ukraine
UKHN	Kharkiv Airport	Kharkiv/Osnova	Ukraine
UKHK	Кременчуг/Великая Кохновка Национальный	Kremenchuk/Velyka Kokhnyvka	Ukraine
UKHP	Полтава Национальный Аэропорт	Poltava	Ukraine
UKHS	Сумы Национальный Аэропорт	Sumy	Ukraine
UKKE	Cherkasy International Airport	Cherkasy	Ukraine
UKKG	Кировоград Национальный Аэропорт	Kirovohrad	Ukraine
UKKK	Киев/Жуляны Международный Аэропорт	Kyiv	Ukraine
UKKM	Киев/Антонов Международный Аэропорт	Kyiv	Ukraine
UKKO	Озерное Национальный Аэропорт	Ozerne	Ukraine
UKKT	Kyiv/Antonov-1 Airport	Kyiv	Ukraine
UKKV	Житомир/Смоковка Аэропорт	Zhtomyr	Ukraine
UKLI	Ивано-Франковск Международный Аэропорт	Ivano-Frankivsk	Ukraine
UKLL	Львов Международный Аэропорт	Lviv	Ukraine
UKLN	Черновцы Международный Аэропорт	Chernivtsi	Ukraine
UKLR	Ровно Международный Аэропорт	Rivne	Ukraine
UKLU	Ужгород Международный Аэропорт	Uzhhorod	Ukraine
UKOH	Херсон Международный Аэропорт	Kherson	Ukraine
UKON	Николаев Международный Аэропорт	Mykolaiv	Ukraine
UKOO	Одесса Международный Аэропорт	Odesa	Ukraine
UKWW	Vynnytsia/Gavryshivka International Airport	Vynnytsia	Ukraine

United Kingdom

Identifier	Aerodrome Name	City	Country
EGAA	Belfast / Aldergrove Airport	Belfast / Aldergrove	United Kingdom
EGAB	Enniskillen - St Angelo Airport	Enniskillen	United Kingdom
EGAC	Belfast City Airport	Belfast	United Kingdom
EGAD	Newtownards Airport	Newtownards	United Kingdom

**Denotes new airport coverage for the current cycle*

EGAE	Londonderry / Eglinton Airport	Eglinton	United Kingdom
EGBB	Birmingham Airport	Birmingham	United Kingdom
EGBE	Coventry Airport	Baginton	United Kingdom
EGBJ	Gloucestershire Airport	Gloucestershire	United Kingdom
EGBK	Northampton - Sywell Airport	Sywell	United Kingdom
EGBM	Tatenhill Airport	Tatenhill	United Kingdom
EGBO	Wolverhampton Airport	Wolverhampton	United Kingdom
EGBP	Kemble Airport	Kemble	United Kingdom
EGBS	Shobdon Airport	Shobdon	United Kingdom
EGBW	Wellesbourne Mountford Airport	Wellesbourne	United Kingdom
EGCB	Manchester / Barton Airport	Manchester / Barton	United Kingdom
EGCC	Manchester Airport	Manchester	United Kingdom
EGCF	Sandtoft Airport	Sandtoft	United Kingdom
EGCJ	Sherburn-in-Elmet Airport	Sherburn-in-Elmet	United Kingdom
EGCK	Caernarfon Airport	Caernarfon	United Kingdom
EGCM	Leeds East Airport	Church Fenton	United Kingdom
EGCN	Doncaster Sheffield Airport	Doncaster / Sheffield	United Kingdom
EGCV	Sleap Airport	Sleap	United Kingdom
EGCW	Welshpool Airport	Welshpool	United Kingdom
EGEC	Campbeltown Airport	Campbeltown	United Kingdom
EGED	Eday Airport	Eday	United Kingdom
EGEF	Fair Isle Airport	Fair Isle	United Kingdom
EGEL	Coll Airport	Coll	United Kingdom
EGEN	North Ronaldsay Airport	North Ronaldsay	United Kingdom
EGEO	Oban Airport	Oban	United Kingdom
EGEP	Papa Westray Airport	Papa Westray	United Kingdom
EGER	Stronsay Airport	Stronsay	United Kingdom
EGES	Sanday Airport	Sanday	United Kingdom
EGET	Lerwick - Tingwall Airport	Tingwall	United Kingdom
EGEW	Westray Airport	Westray	United Kingdom
EGEY	Colonsay Airport	Colonsay	United Kingdom
EGFA	West Wales - Aberporth Airport	Aberporth	United Kingdom
EGFE	Haverfordwest Airport	Haverfordwest	United Kingdom
EGFF	Cardiff Airport	Cardiff	United Kingdom
EGFH	Swansea Airport	Swansea	United Kingdom
EGGD	Bristol Airport	Bristol	United Kingdom
EGGP	Liverpool Airport	Liverpool	United Kingdom
EGGW	London Luton Airport	Luton	United Kingdom
EGHA	Compton Abbas Airport	Compton Abbas	United Kingdom
EGHC	Land's End - St. Just Airport	St. Just	United Kingdom
EGHE	Scilly Isles - St. Mary's Airport	St. Mary's	United Kingdom
EGHF	Lee-On-Solent Airport	Lee-On-Solent	United Kingdom
EGHG	Yeovil - Westland Airport	Yeovil	United Kingdom
EGHH	Bournemouth Airport	Bournemouth	United Kingdom
EGHI	Southampton Airport	Southampton	United Kingdom
EGHO	Thrupton Airport	Thrupton	United Kingdom
EGHQ	Newquay Airport	Newquay	United Kingdom
EGHR	Chichester - Goodwood Airport	Chichester	United Kingdom
EGHT	Tresco Heliport	Tresco	United Kingdom
EGJA	Alderney Airport	Alderney	United Kingdom
EGJB	Guernsey Airport	Guernsey	United Kingdom
EGJJ	Jersey Airport	Jersey	United Kingdom
EGKA	Shoreham Airport	Shoreham	United Kingdom
EGKB	Biggin Hill Airport	Biggin Hill	United Kingdom
EGKK	London Gatwick Airport	London Gatwick	United Kingdom
EGKR	Redhill Airport	Redhill	United Kingdom
EGLC	London City Airport	London City	United Kingdom
EGLD	Denham Airport	Denham	United Kingdom

**Denotes new airport coverage for the current cycle*

EGLF	Farnborough Airport	Farnborough	United Kingdom
EGLJ	Chalgrove Airport	Chalgrove	United Kingdom
EGLK	Blackbushe Airport	Blackbushe	United Kingdom
EGLL	London Heathrow Airport	London	United Kingdom
EGLM	White Waltham Airport	White Waltham	United Kingdom
EGMC	Southend Airport	Southend	United Kingdom
EGMD	Lydd Airport	Lydd	United Kingdom
EGNE	Retford / Gamston Airport	Retford / Gamston	United Kingdom
EGNF	Netherthorpe Airport	Netherthorpe	United Kingdom
EGNH	Blackpool Airport	Blackpool	United Kingdom
EGNJ	Humberside Airport	Humberside	United Kingdom
EGNL	Barrow - Walney Island Airport	Barrow	United Kingdom
EGNM	Leeds Bradford Airport	Leeds Bradford	United Kingdom
EGNO	Warton Airport	Warton	United Kingdom
EGNR	Hawarden Airport	Hawarden	United Kingdom
EGNS	Isle of Man Airport	Isle of Man	United Kingdom
EGNT	Newcastle Airport	Newcastle	United Kingdom
EGNV	Teesside International Airport	Darlington	United Kingdom
EGNW	Wickenby Airport	Wickenby	United Kingdom
EGNX	East Midlands Airport	East Midlands	United Kingdom
EGPA	Kirkwall Airport	Kirkwall	United Kingdom
EGPB	Sumburgh Airport	Sumburgh	United Kingdom
EGPC	Wick Airport	Wick	United Kingdom
EGPD	Aberdeen Airport	Aberdeen	United Kingdom
EGPE	Inverness Airport	Inverness	United Kingdom
EGPF	Glasgow Airport	Glasgow	United Kingdom
EGPG	Cumbernauld Airport	Cumbernauld	United Kingdom
EGPH	Edinburgh Airport	Edinburgh	United Kingdom
EGPI	Islay Airport	Islay	United Kingdom
EGPK	Prestwick Airport	Prestwick	United Kingdom
EGPL	Benbecula Airport	Benbecula	United Kingdom
EGPN	Dundee Airport	Dundee	United Kingdom
EGPO	Stornoway Airport	Stornoway	United Kingdom
EGPR	Barra Airport	Barra	United Kingdom
EGPT	Perth/Scone Airport	Scone	United Kingdom
EGPU	Tiree Airport	Tiree	United Kingdom
EGSC	Cambridge Airport	Cambridge	United Kingdom
EGSF	Peterborough - Conington Airport	Peterborough	United Kingdom
EGSG	Stapleford Airport	Stapleford	United Kingdom
EGSH	Norwich Airport	Norwich	United Kingdom
EGSS	London Stansted Airport	London Stansted	United Kingdom
EGSU	Duxford Airport	Duxford	United Kingdom
EGSV	Old Buckenham Airport	Old Buckenham	United Kingdom
EGSY	St. Athan Airport	Cardiff	United Kingdom
EGTB	Wycombe Air Park - Booker Airport	Wycombe	United Kingdom
EGTC	Cranfield Airport	Cranfield	United Kingdom
EGTE	Exeter Airport	Exeter	United Kingdom
EGTF	Fairoaks Airport	Fairoaks	United Kingdom
EGTH	Old Warden Airport	Old Warden	United Kingdom
EGTK	Oxford Airport	Kidlington	United Kingdom
EGTO	Rochester Airport	Rochester	United Kingdom
EGTR	Elstree Airport	Elstree	United Kingdom
EGTU	Dunkeswell Airport	Dunkeswell	United Kingdom

**Denotes new airport coverage for the current cycle*